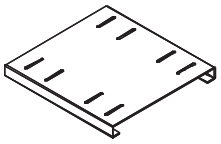
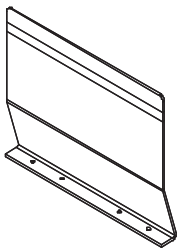
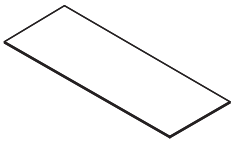
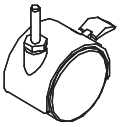

AID CPU001E
CPU Stand


Part	Drawing	Description	Qty
P1		CPU Base	1 EA
P2		CPU Support	2 EA
P3		Adhesive Foam Pads	3 EA

Hardware List

Part	Drawing	Description	Qty.
A		Phillips Head Screw 5/8”	8 EA
B		Hex Nut -small	8 EA
C		Flat Washer	8 EA
D		Hex Nut - large	4 EA
E		Locking Caster 1-1/2”	2 EA
F		Caster 1-1/2”	2 EA
G		Caster Wrench	1 EA

READ THROUGH INSTRUCTIONS FROM BEGINNING TO END BEFORE STARTING TO ASSEMBLE UNIT.

1 Identify and separate all the parts and Hardware.
2 Attach 2 each CPU Supports (P-2) to CPU Base (P-1) using 8 each screws (A), 8 each Flat Washers (C), and 8 each Hex Nuts (B) as shown in illustra tion #1.

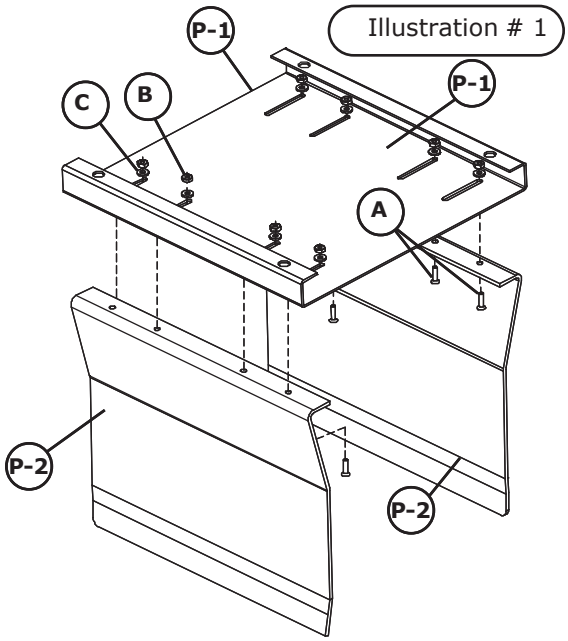

ERGOMART

Ergonomic solutions for office and light industrial work environments

©2015 Ergomart. All rights reserved.

AID CPU001E
CPU Stand

3. Attach 2 Locking Casters (E) to one end of CPU Base (P-1) using 2 each Large Hex Nuts (D). Attach 2 Casters (F) to the other end of CPU Base (P-1)using 2 each Large Hex Nuts (D). Tighten all Casters using Caster Wrench (G).

Illustration # 2


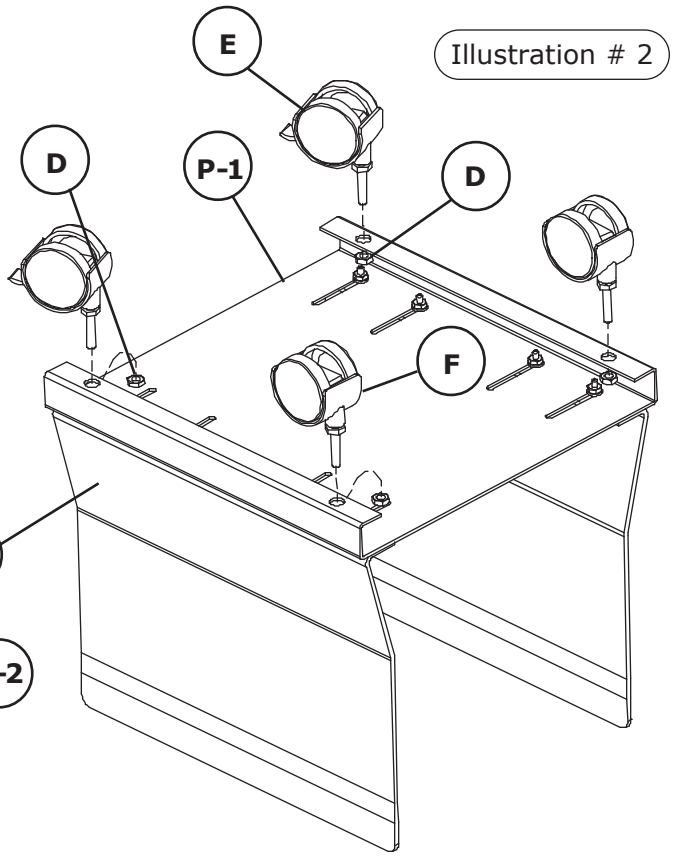


Illustration # 3

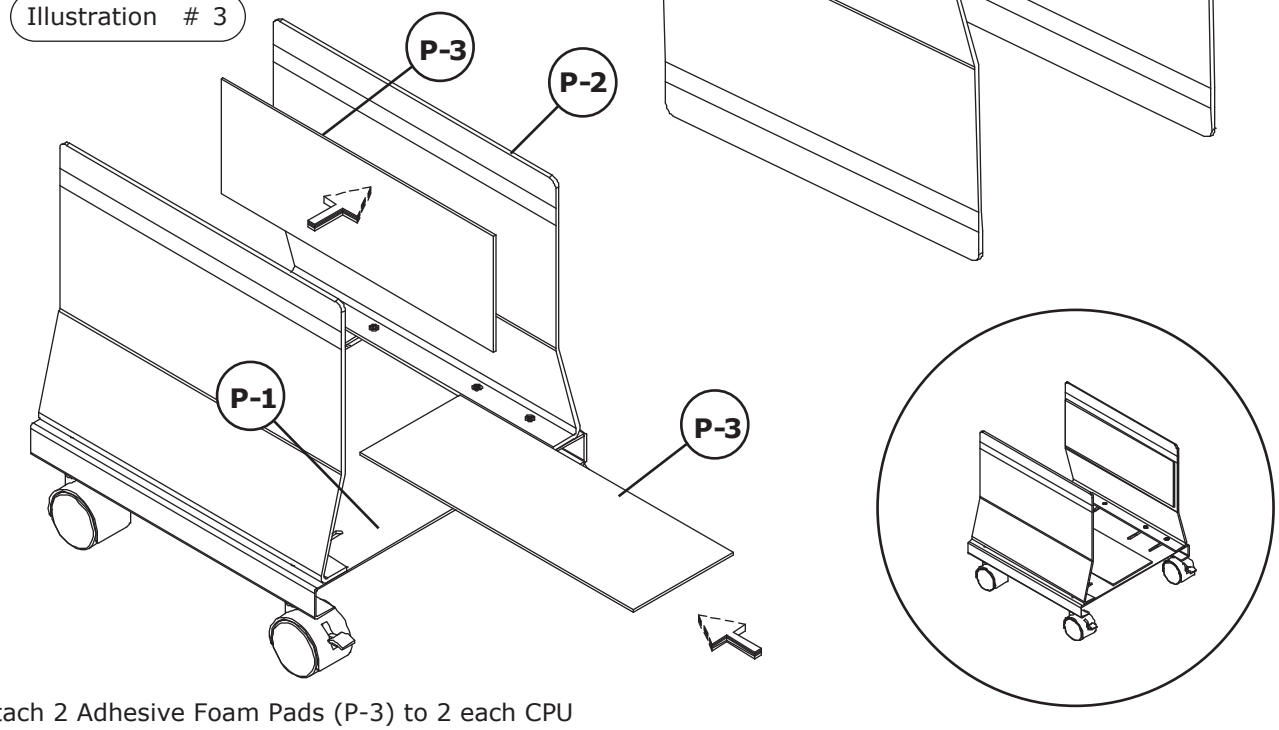

4. Attach 2 Adhesive Foam Pads (P-3) to 2 each CPU Supports (P-2) as shown in illustration #3. Attach 1 Adhesive Foam Pad (P-3) to CPU Base (P-1) as shown in illustration #3.

Do not use unless all screws are tight. At least every six months, check all screws to be sure they are tight.

ERGOMART

Ergonomic solutions for office and light industrial work environments

©2015 Ergomart. All rights reserved.